

DUORO®

X-GO PROFI | HOMEVAC

- WIPING AND MOPPING ROBOT CLEANER -



VACUUMS
MOPS



MOBILE
APPLICATION



PROFI
EQUIPMENT



LASER
NAVIGATION



EL. CONTROLLED
MOPPING

RobZone®

Content

Safe use rules	1
Top features and functions	2
Package content	3
Vacuum cleaner description	4
The main control button	5
Display with control buttons	6
How it cleans	6
How to start	8
Start cleaning	9
Cleaning modes	10
Extra cleaning programs	11
Wiping	12
Mobile application	13
Scheduled cleaning	14
Charging	15, 16
Robot voice settings	17
Regular maintenance	18, 19

You can conveniently control the Robot Cleaner using the mobile app, which is freely downloadable on Google Play and AppStore under the name "RobZone"



Thank you for purchasing the ROBZONE DUORO X-GO robotic vacuum cleaner
Please read the chapter "rules for safe use" in detail before use,
in order to use the robot vacuum cleaner safely.

Safe use rules

Before using the robot vacuum cleaner, please read the safe use rules thoroughly and follow all normal safety rules to reduce the risk of damage to the robot vacuum cleaner or in case of injury to yourself.

Keep this manual.

- !** The robotic vacuum cleaner is designed exclusively for indoor use and is not suitable for industrial use and loads. Never use it outdoors. This robotic vacuum cleaner is not designed to vacuum liquids! Do not wash the robotic vacuum cleaner or its accessories (charging base, adapter, etc.) with water; you risk short-circuiting the electronic components.

Recommendation

If you purchased the vacuum cleaner during the winter months or transported it in cold weather, we recommend that you first acclimatise the robot to room temperature before starting it up. This will prevent damage to the electronics due to condensation in the cold air.

Warning

- 1** Do not allow children to use the robotic vacuum cleaner, even with adult supervision.
- 2** Inform all housemates about the use of the robot vacuum cleaner to avoid possible injury.
- 3** Do not use the robotic vacuum cleaner in rooms with a high concentration of humidity or where the mainboard may come into direct contact with water. Do not wash the vacuum cleaner with water!
- 4** Before use, remove from the reach of the robotic vacuum cleaner any objects that could damage it (glass, textiles, paper, etc.), become entangled in the side brushes, or clog the suction opening. When using the vacuum cleaner for the first time, it is recommended to observe the vacuum cleaner and detect any potential pitfalls in the apartment (inappropriate height of furniture or heater under which the vacuum cleaner can get stuck, problematic thresholds or transition bars, improperly placed carpet, etc.) For further cleaning, secure the detected areas so that the vacuum cleaner no longer has a problem with them during cleaning and can perform a perfect cleaning of the floor.
- 5** Only use the accessories supplied by the manufacturer of the robot vacuum cleaner for charging. The use of non-original accessories can lead to damage to the robot vacuum cleaner, electric shock or even fire.
- 6** Only a trained technician at an authorised service centre is authorised to dismantle or repair the robot vacuum cleaner. If the robotic vacuum cleaner is tampered with outside of an authorized service center, you automatically lose the product warranty.
- 7** Use caution when replacing the battery. Liquid may leak from the battery and result in damage to household equipment or fire or injury. Never use a damaged or deformed battery in any way. Always use only the original battery.
- 8** Do not insert any sharp objects or screwdriver into the intake opening.
- 9** If you use the vacuum cleaner regularly, do not cover it with any cover or cloth.
- 10** If you will be transporting the robot vacuum cleaner or will not be using it for an extended period of time, turn it off using the main switch.
- 11** Do not transport the robotic vacuum cleaner in one package with small items such as chains or hair clips, etc., to prevent them from getting caught in the body of the vacuum cleaner and causing damage to it.
- 12** Do not use an adapter with a voltage converter, you risk overheating, malfunction or fire. Always use only original accessories.
- 13** Do not touch parts that are connected to the mains if your hands are wet. Avoid contact of body parts and clothing with the wheels of the robotic vacuum cleaner.
- 14** Do not use the robotic vacuum cleaner near any flammable substances.
- 15** Do not run cleaning programs while the robotic vacuum cleaner is charging using the AC adapter.

- 16** Do not strain or put any strain on the AC adapter cable.
- 17** Do not sit on the robot vacuum cleaner or place other objects on it.
- 18** Do not use the robot vacuum cleaner on elevated areas where it could fall (tables, chairs, shelves, etc.). Do not use it to clean beds or mattresses.
- 19** Do not use the robot vacuum cleaner if its collection basket is full, empty the basket regularly.
- 20** Use the robotic vacuum cleaner in temperatures between 0 - 40°C. Do not place the robot vacuum cleaner in places with high temperatures.
- 21** Remove the battery before disposing of or recycling the robot vacuum cleaner. Disconnect the robot vacuum cleaner from the AC adapter before removing the battery. Dispose of the used battery in the designated place.
- 22** When the robotic vacuum cleaner is switched on, do not touch the rotating brushes and wheels to avoid injury.
- 23** Publication, uploading, copying or translation into other languages of this manual and similar or related materials is only possible with the written permission of the manufacturer and the dealer Robzone Europe. Protected by copyright.
- 24** We have made every effort to ensure that this manual is an accurate and good guide for the operation of your robotic vacuum cleaner. We apologise for any deviations and would appreciate your feedback.

The Robotic Cleaner is not recommended to be operated by children under the age of 8 years and persons with reduced physical, sensory or mental abilities or insufficient experience and knowledge without supervision and proper instruction in the safe use of the appliance and understanding of the risks involved. Children should not play with the appliance and should not carry out cleaning and maintenance without supervision.

Top features and functions

- **Cleverly vacuums and mops**
- **Electronically controlled mopping with watering intensity selection**
- **Precise laser navigation**
- **3 cleaning programmes**
- **2 mopping modes: Aquamax and Y-Shaped**
- **3 levels of floor watering intensity**
- **Clear push-button display directly on the robot body**
- **Advanced mobile app control**
- **Intelligent mapping and zone cleaning**
- **Extra powerful suction power with turbo suction function**
- **Automatic Carpet Boost on carpets**
- **High-capacity lithium battery**

Contents of the basic package DUORO X-GO



Robotic cleaner



Charging base
(Profi variant only)



Remote control
(batteries not included)



Combined
2 in 1 mopping module



Mopping module



Active Brush Suction Head
with Airmax rotary brush
(installed in the cleaner)



Power adapter



2+2 side brushes



1+1 Mop Aquamax
for wet mopping



Aquamax cleaning agent
with disinfection



Main fine filter
+ secondary filter



1+1 HEPA 14 filter
(1 installed in the cleaner)



Cleaning station Homevac
including cable
(only for Homevac variant)

 


Dust bag
1 + 1 spare
(Homevac variant only)


Package content may vary slightly from model to model. Instructions are always included in each package. The relevant listing is given for the specific model at www.robzone.com.

Cleaner description

Cleaner body

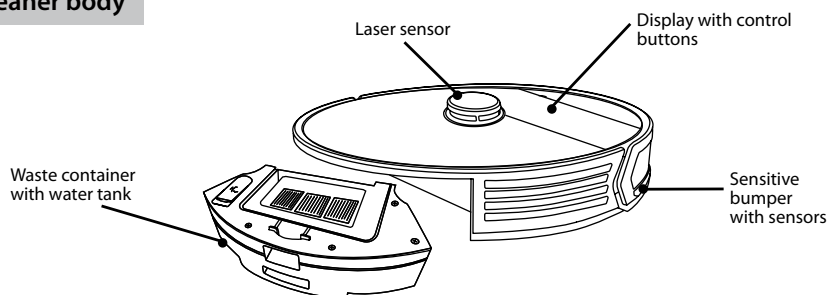

 Suction head ACTIVE BRUSH with rotary brush




Cover grid of the rotary brush




Rotary brush
Airmax

 Side brushes

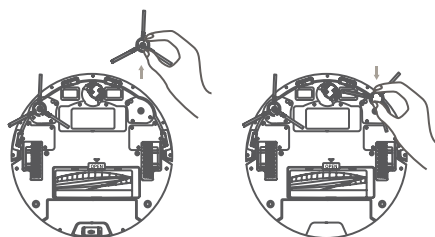


Vacuum chassis

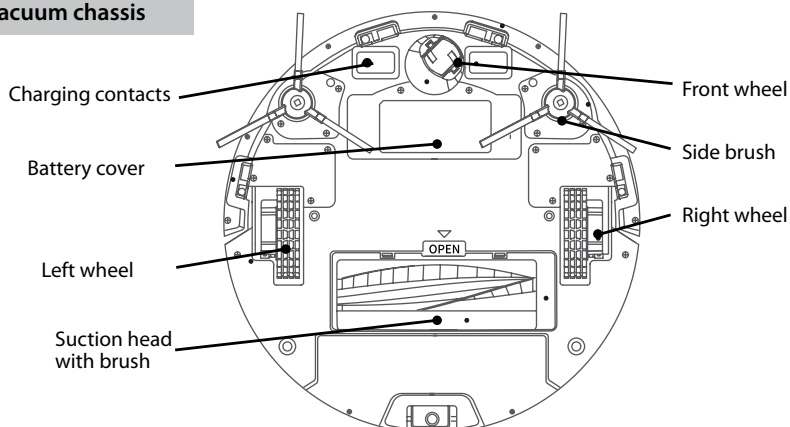 

Aquamax combined mopping module


Dust bin

 Water tank funnel

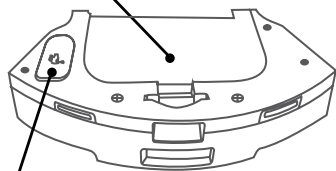

Waste container

 
Filtration

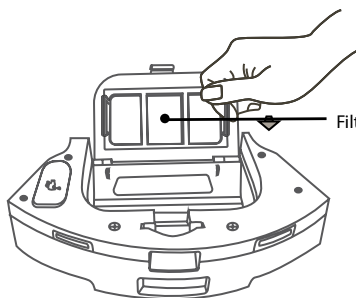

Mopping module

Velcro fastening of mop

 
Safety loops

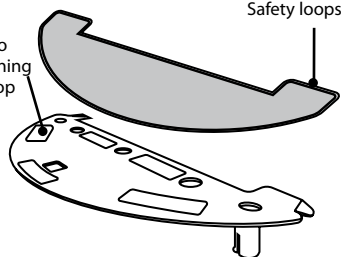

Charging base

Indicator

 Charging areas

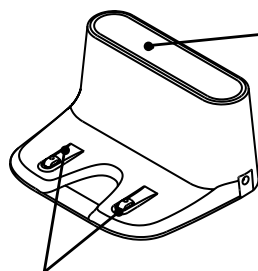

Cleaning station Homevac

 
Lid

Display

Navigation sensors

Exhaust opening

Charging areas

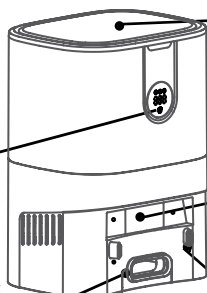


Remote control

1

2

3

 4



5

 
6

7

8

- 1) Switching the robot on/off
- 2) Directional buttons
- 3) Voice packages
- 4) Vacuum mode settings
- 5) Charge and return to base
- 6) Cleaning along walls
- 7) Start/stop cleaning
- 8) Wiping settings

Control display

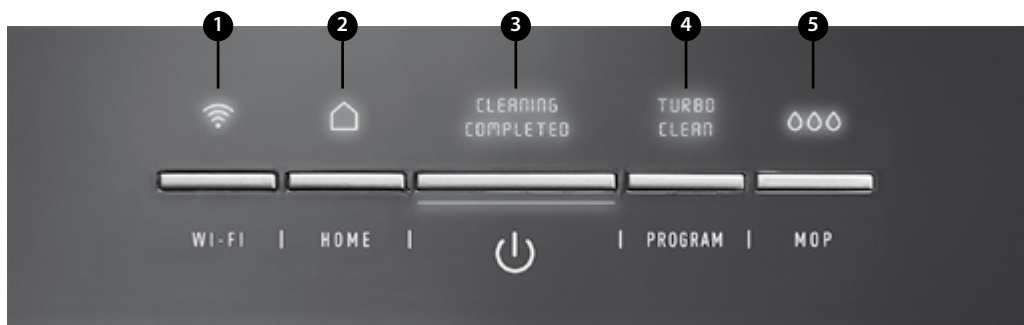

1. Wi-Fi connection > Pair the robot with the mobile app.
2. Charging > Park the robot in the charging station/base.
3. Main control button > Activate and deactivate the robot > Start/stop cleaning.
Main communication line, informs about the current status of the robot.
Information about the set mopping mode.
4. Selection of vacuuming programs.
5. Selection of wiping modes and intensity. Press the button repeatedly to set the wiping intensity in the Aquamax programme (3 intensity levels). Then press the button to change the wiping programme from Aquamax to Y-Shaped and again to set the soaking intensity (3 intensity levels). Last in the sequence, the soaking is switched off completely. The wiping settings in the Aquamax programme are then repeated.

Modern intuitive control

Buttons on display

The display on the body of the robot allows quick operation for everyday cleaning. Easily set vacuuming programmes or mopping modes with different floor soaking intensities. In addition, the display informs you of all robot statuses.

Mobil application

The mobile app offers the ultimate in convenient control from anywhere via WiFi. With the app, you can view a real-time cleaning map, enter commands and schedule cleaning exactly on time. The mobile app is available for both iOS and Android.

Remote control

If you're used to using a remote control for your TV, you'll definitely welcome this option with a robot vacuum cleaner. You can use the remote control to start selected cleaning programs or navigate the robot around the room using the directional buttons. A great advantage is the quick setting of the language using the remote control.

How Duoro X-GO cleans

Duoro X-GO is designed to move smartly around your home and clean the entire floor in one cleaning cycle. It creates a map of the rooms, which it then cleans systematically, in methodical squares. In the first phase of the cleaning, it cleans the space along the walls and furniture and then moves on to sub-areas. It chooses the best cleaning procedure, records the route in real time on the app and tracks where it has been and where it hasn't.

Notes:

It's possible for Duoro X-GO to move to another room before it's finished cleaning the first. This is due to the layout of the rooms. Don't worry, before it completes the task, it will return to clean up the areas it missed. During the cleaning cycle, the robot may touch the corners of rooms, chair legs and other furniture to clean as thoroughly as possible.


Duoro X-GO cleans until it has cleaned the entire floor. If the battery capacity drops before the end of the cleaning, the robot searches for a charging base to recharge itself. Once the battery is fully charged, it automatically goes back to work and finishes cleaning.

When cleaning is complete, it will return to the charging base/station to recharge and be ready for further instructions.

You can choose to clean the entire floor or just selected rooms.





Getting the robot ready for use

 1. Remove the safety foam strips that block the bumper during transport.
2. Install the side brushes as marked "L" and "R".
3. Remove the safety film on the bumper.
4. Install the Homevac charging base or cleaning station.
5. Download the Robzone Robot app to your smartphone and pair the robot exactly as instructed in the app. Before pairing, your mobile device must be connected to your home Wi-Fi (2.4 MHz).
6. Allow the robot to fully charge before cleaning for the first time (at least 5 hours).

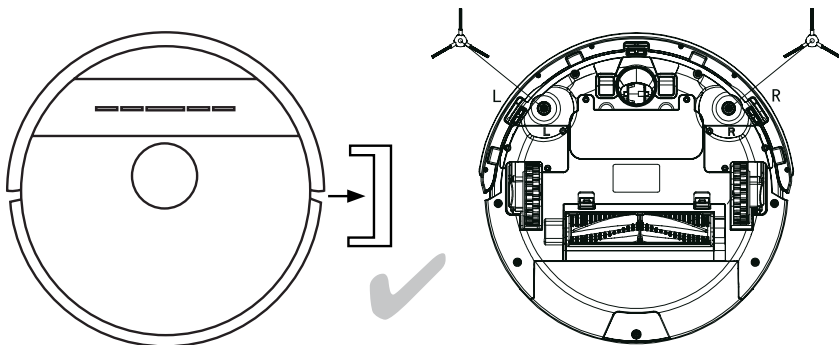

Charging base/station installation

    Place the charging base/station with its back to the wall. Observe the recommended distances to the sides and in front of the base/station to avoid problems when parking the robot in the base/station. Connect the power cord to the power supply. The power supply cable should be connected to the mains.

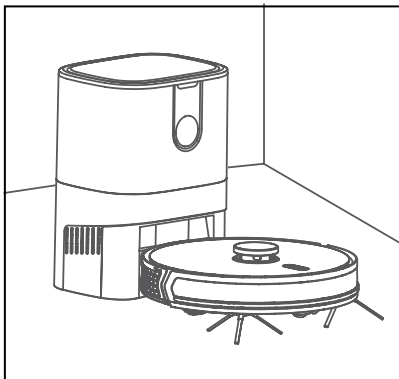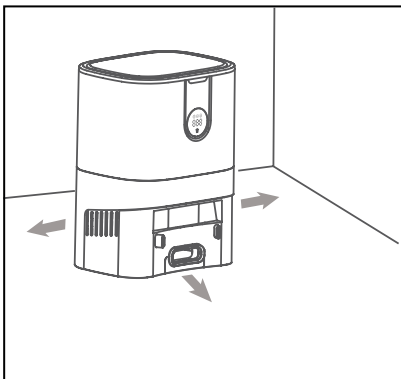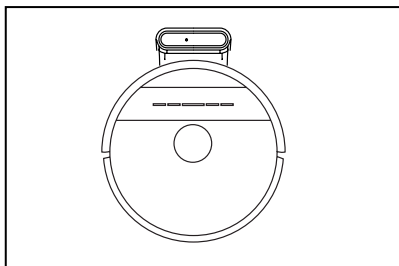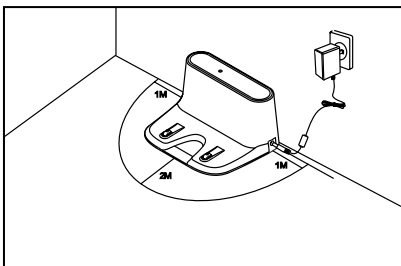

On / Off / Sleep mode

Switching on: A long press of the main button on the display (6 seconds) activates the robot.

The display lights up and the robot greets you with **Hello**.

Switching off: A long press of the main button (3 seconds) switches the robot off completely.

The robot goes into sleep mode after a long period of inactivity. To activate it, press the main button again.

Tips before the first cleaning

 
Every apartment and space is different, so we recommend that you do not leave the robot vacuum cleaner unattended when using it for the first time, but rather observe how it behaves in your apartment. This way, you can easily track down potential problem areas and avoid complications.

The robot will clean the entire floor until it covers the entire area. In the event that the battery runs out during the cleaning process, the robot will charge itself and then continue cleaning until it is completely finished.

To load the first map, we recommend that you adjust the room so that the robot has maximum coverage. Remove possible obstacles. The quality of the map rendering in the app will reflect the prepared area. Do not interrupt cleaning while the first map of the household is loading.

If classic high thresholds separate the rooms, the robot will not be able to load the entire household and you need to let it load individual rooms and save them as separate maps.

To load the map correctly open all doors.

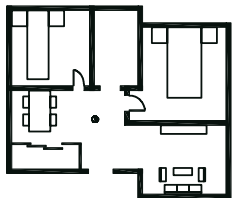

Remove from the floor smaller objects.



If individual rooms are separated by high thresholds, the robot will not be able to read the entire household and needs to be allowed to read individual rooms and store them as separate maps. A robot vacuum cleaner is not perfect and needs to "get to know" its new surroundings first in order to serve you reliably for a long time. Don't be fooled by the seemingly illogical movement, but a robot cleans differently than a human. And believe us, you'll be happy with the result.

This robotic vacuum cleaner is equipped with precise laser navigation for precise obstacle detection and space retrieval.

The robotic vacuum cleaner will go over transition bars up to 2 cm high and carpets with normal pile density up to about 1-2 cm high. If the robot is equipped with a mopping module, check that it can climb the transition bar without difficulty during the first cleaning. Measure the area under furniture to ensure that the robot will not get stuck under furniture.

The robot must not come into direct contact with water or other liquids. **It is not designed for vacuuming liquids**, but solely for wet mopping, so fill the water tank with water away from the body of the robot vacuum cleaner. Do not clean the robot with a wet cloth under any circumstances, but only dry.

Start cleaning

You can start cleaning in three ways:

- Press the main control button on the robot vacuum cleaner
- Press the "AUTO" button on the remote control
- Press "Start" on the app



**MAIN
BUTTON**



**REMOTE
CONTROL**



APPLICATION



The default cleaning mode is the DAILY programme, for quick, intelligent cleaning. If you want a different cleaning mode, change the settings in the app or set with the button on the remote control.

To stop cleaning, press the control button on the robot vacuum cleaner again or the "AUTO" button on the remote control or mobile app. Do not interrupt cleaning unless necessary.

The first time you start the robot, it will load a map of the area and then use it for subsequent cleanings. Save the map after the first cleaning, edit and name the rooms if necessary. If you will have more than one map saved, always check that the map of the space is set as the default before subsequent cleanings.

If you only want to clean selected rooms, mark them in the app before you start cleaning.

Keep the robot vacuum cleaner in the charging base at all times. If you don't want to use the app, simply move the robot to the room you want to clean, close the door and start cleaning.

End of cleaning

If a charging base/Homevac cleaning station is located in the cleaning area, the robot will automatically locate it, park itself and start recharging the battery when the cleaning is complete. If the battery capacity is not sufficient for the entire cleaning of the area, the robot will automatically resume cleaning where it left off until it is finished.

If there is no Homevac charging base/cleaning station available in the cleaning area, the robot will remain where it started after unsuccessfully searching for a base and must be manually shut down or transferred to a charging base. The base search can take up to 30 min.

To end the cleaning, use the main control button on the robot body, the "AUTO" button on the remote control or the "pause" button on the app.



**MAIN
BUTTON**



**REMOTE
CONTROL**

 


APPLICATION



Complete switch-off

To switch off the robot vacuum cleaner completely, press long the main button on the display. Before switching off completely always make sure that the battery is fully charged.

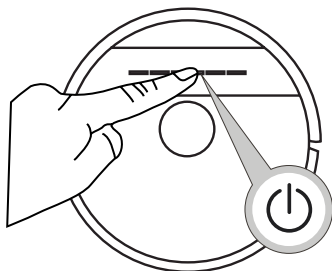

Programmes and cleaning modes

3 cleaning modes for a perfectly clean home

You can choose between three cleaning modes, depending on your preference.
The modes are only selectable in the app.

Set cleaning-> Cleaning modes -> **Vacuuming & Mopping / Vacuuming / Mopping**



Vacuuming programs

Daily Clean	smart cleaning ideal for everyday vacuuming and mopping
Deep Clean	cleaning suitable for moderately dirty floors
Turbo Clean	cleaning with turbo suction
Carpet Boost	automatically increases performance on more soiled carpet

Mopping programs

Y-SHAPED	intensive mopping suitable for very dirty floors, where the robot moves in the direction of the arrow
AQUAMAX	Intensive wet mopping

Mopping programs

1x	Daily
2x	Deep
3x	Turbo

Intensity floor wetting

1x	Low
2x	Middle
3x	High



Daily clean - fast everyday cleaning

The robot first uses a laser sensor to map the apartment space and select the most suitable cleaning route. During this program, the robot cleans systematically by constantly evaluating the surrounding environment. It doesn't miss a spot. Before finishing the cleaning, the robot thoroughly scans the entire area around the walls. Once it has covered the entire area, it stops cleaning. If the area to be cleaned is so large that the robot could not clean it in one cleaning session, it will drive to the charging base to recharge and resume where it left off. This vacuuming programme is suitable for everyday cleaning. If you choose the "vacuum and mop" mode, you only need to set the mopping programme and the soaking intensity in addition to this programme.

Activation programs

Robot display	Press button PROGRAM (1x)
Remote control	NChoose program vacuuming (1x) and to start press the button AUTO
Mobile app	Set cleaning -> Vacuuming programs

Programme duration:It depends on the size of the area to be cleaned. The robot itself recognizes when the space is completely cleaned. If the space is larger and the cleaning takes longer than the battery capacity, the robot stops cleaning to recharge and continues cleaning after the energy is recharged. When selecting cleaning in the app, the number of cleaning cycle repetitions can be selected to increase the quality of cleaning.

TURBO – Cleaning with turbo suction

During this cleaning, the robot automatically activates the turbo suction to make the vacuuming as efficient as possible. Can be combined with mopping.

Program activation

Remote control Mobile app Robot display	Select vacuum program (3x) set cleaning -> Suction program Press button PROGRAM 3x
---	--

Program duration: It depends on the size of the area to be cleaned. The robot itself recognizes when the space is completely swept. When the cleaning is finished, it locates the charging base.

Function CARPET BOOST: When cleaning dirty areas of the carpet, the robot automatically increases the suction power. This function must be activated in the app.

DEEP – thorough cleaning

This program is ideal for thorough vacuuming of medium-soiled floors. Can be combined with mopping.

Program activation

Remote control Mobile app Robot display	Select vacuum program (2x) Set cleaning -> Suction program Press button PROGRAM 2x
---	--

Program duration: It depends on the size of the area to be cleaned. The robot itself recognizes when the space is completely swept. When the cleaning is finished, it locates the charging base.

Extra cleaning programs

Targeted SPOT cleaning

During this cleaning process, the robot cleans a given area of 2 x 2 m² precisely. This program is suitable for cleaning, for example, scattered rubbish or rag carpets. Place the robot on the cleaning site and activate the program in the app. The program starts immediately after selecting in the app. When finished, it parks itself in the base/station.

Program activation

Mobile app	Other settings -> User functions
------------	----------------------------------

Carpet Boost

The robot detects more soiled carpet and automatically increases power for a thorough cleaning..

Program activation

Mobile app	Other settings -> Automatic Carpet Boost
------------	--

TIP

Don't forget this feature activate it in the app.

Mopping programs

Aquamax wiping

Wet mopping, where the robot vacuums and mops at the same time. For this type of cleaning it is possible to select any vacuuming mode and adjust the intensity of the floor wetting as required.

Mode activation

Robot display Mobile app	MOP -> 1x, 2x, 3x Set cleaning-> Mopping intensity Aquamax mode is automatically preset
-----------------------------	---

You can select the following programme on the display by pressing the MOP button.

- 1x Aquamax program low wetting intensity
- 2x Aquamax program middle wetting intensity
- 3x Aquamax program high wetting intensity

The mopping intensity and mopping programme can also be set on the remote control using a similar mechanism to the robot display.

Y-SHAPED mopping

The robot first goes around the perimeter of the space along the walls and furniture and then fills the area with a specific movement in the direction of the arrow. This ensures that the mop rubs the floor intensively and removes large debris. The Aquamax program is pre-set in the Mobile App and the Y-SHAPED program must be activated.

Mode activation

Robot display	MOP -> 4x, 5x, 6x
Mobile app	Set cleaning-> activate mopping
	Y-Shaped -> mopping intensity

You can select the following programme on the display by pressing the MOP button.

4x Aquamax program low wetting intensity
5x Aquamax program middle wetting intensity
6x Aquamax program high wetting intensity
7x wetting off

Mopping

The mopping intensity and mopping program can be set on the remote control using a similar mechanism to the robot display.

 
The DUORO X-GO cleaner is equipped with an Aquamax mop for intensive mopping.

You can mop all types of washable floors.

You can choose from 2 mopping modes according to the dirt on the floor and set 3 mopping intensities for each mode.

Before each mopping session, the water tank in the mopping module must be filled to the brim with water. You can add a few drops of Aquamax disinfectant cleaner to the reservoir for a higher cleaning effect and a pleasant household fragrance. You can also apply the cleaner directly to the damp mop. **Never use other non-original detergents in the tank, you risk damaging the electronic pump and mop module.**

1. Remove the silicone tank cover and fill the tank to the brim with water through the opening.
2. Add Aquamax cleaner (a few drops)
3. Dampen the mop
4. Place the mop on the sweep module (Using the special Velcro on the module and the safety loops. The mop fibers face the floor.)
5. Insert the mop module into the holes on the robot chassis
6. Select the mopping program
7. Set the wetting intensity

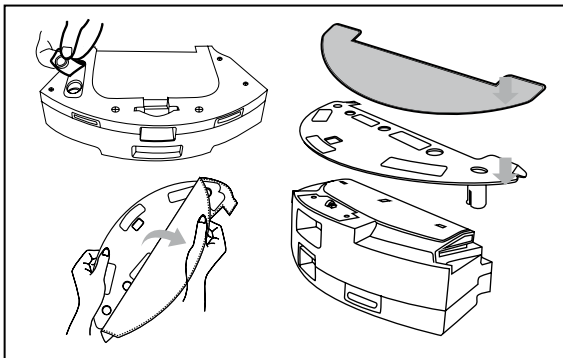

When the wiping is finished, the robot parks in the charging base. Immediately afterwards, pour out the remaining water from the tank and wash or rinse the mop and leave it to dry for further use. Do not leave the mop module with the wet mop deployed in the robotic vacuum cleaner after cleaning is complete, there is a risk of excess wetting of the floor from the wet mop.

Before mopping, make sure that there is no carpet, high thresholds or transition rails in the cleaned area where the mop robot could get stuck.

Mark the carpet as a no-go zone (NO-GO) in the application before mopping.

If you select only the "mopping" mode then you have the option to set permanent restricted zones for this mode in the app. If you use any other cleaning mode, these zones will not be visible.

 
Notice



- Never soak the mop when it is attached to the vacuum cleaner, it could get wet and damage the equipment.
- Only fill water into the designated water tank, never pour water into any other part of the vacuum cleaner, you risk permanent damage to the robot's electronics.
- Never pour non-original detergent directly into the tank.
- Never use the delayed start function when wet and damp mopping to avoid excessively wetting the floor around the charging base.
- Never vacuum liquids, the robot is designed for wet mopping but never for wet vacuuming!


Marking zones in the app

In the mobile app, you can mark no-go zones (NO-GO) on the map, which the robot is guaranteed to avoid every time it cleans. Zones can also be saved on the map for future cleaning.-> **Edit map**

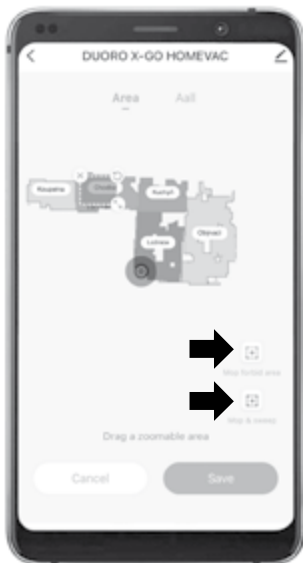

Marking virtual wall in the app

 In the mobile app, you can mark virtual walls on the map - lines that the robot won't cross when cleaning. The walls can also be saved in the map for future cleaning.-> **Edit map**

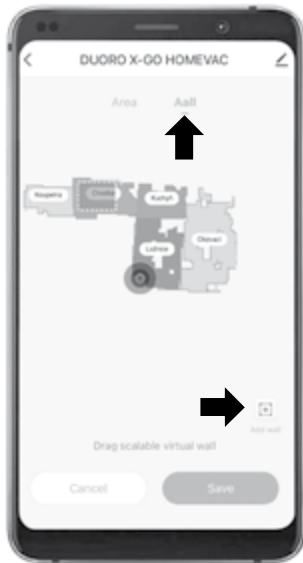

NO-GO zones for mopping

The robot skips the space when wiping. It is activated and visible in the app only in the "mopping" cleaning mode.

NO-GO zones for mopping&vacuuming

The robot skips the space in the "vacuum & wipe" cleaning mode.

Mobile application

The mobile app makes it easy and convenient to control the robot and the entire cleaning process from anywhere, anytime. It works with permanent maps that it loads the first time it cleans and saves the data directly to the map in the app. After saving and naming a new household map, the robot itself suggests room divisions, which you can then edit, rename and work with. Very handy is the possibility to set virtual barriers directly in the room map.

With the app you can monitor the robot's cleaning map in real time, you can start cleaning at any time, schedule cleaning in advance, or control the robot with directional buttons. The mobile app also brings a revolutionary solution in wet cleaning, allowing you to easily set any intensity of mop wetting depending on the type or dirtiness of the floor.

To use the mobile app, first install the app on your mobile device (phone, tablet) and pair the app with the robot.

1. Download the app „ROBZONE ROBOT“ from Google Play or AppStore.
2. Register to the app
3. Enter the details of your home Wifi to which the robot will be connected when cleaning. (When pairing, it is essential that the phone or tablet is currently connected to the same 2.4 Ghz home Wifi)
4. Activate the robot with the main button. Long press the Wifi button on the robot's display until it flashes.
5. Follow the instructions in the app or the app instructions for successful pairing.



ANDROID APP ON
Google play

Download on the
App Store

Loading the map into the app for the first time

The robotic vacuum cleaner scans the entire space during the first cleaning and then divides it into rooms. The division may not be 100% correct, so it is possible to make detailed adjustments to the rooms in the app exactly according to reality. Rooms can be divided or joined, named and restricted zones can be placed on the map. Save and name the final map, so that you can always find it in the map overview and the robot will work with the map automatically in future cleanings. You can have up to 5 maps stored in the app. You can choose to clean only selected rooms or the entire floor and schedule cleaning exactly on time.

If the robot will clean multiple floors, save a map of each floor separately and activate it as the default before cleaning.

For cleaning in different environments/floors, always move the charging base as well and place it in the same starting location. Alternatively, we recommend purchasing a separate charging base for each environment. If you still leave the robot to clean in an environment without a charging base, the robot will automatically search for the base when the cleaning is finished and will go into sleep mode if it does not find it. Place it manually in the base. Never leave the robot away from the charging base for too long to avoid complete discharge and subsequent damage to the battery.

Favourite features in the app:

- Adjusting the wetting intensity during wiping.
- Intelligent mapping and cleaning of selected rooms.
- Marking of restricted zones.
- Marking of smaller zones for targeted cleaning.
- Setting of scheduled cleaning for the whole week ahead.
- Setting times when you don't want to be disturbed by the robot.
- Rendering a real-time cleaning map.
- Records of the robot's work.
- Customer support.
- And more...

Scheduled cleaning

Use the cleaning timer to set a cleaning schedule. The robotic vacuum cleaner will automatically start cleaning at the programmed time and day.

Scheduled cleaning is possible to set:

- In the mobile app

In the scheduled cleaning, you set the time for each day of the week when the robot should clean. The app allows settings individually for each day, selecting a mode for scheduled cleaning and scheduling cleaning for a selected room only. Please refer to the app's user guide for detailed instructions.

Cancelling the timer

In the mobile app, select "delete scheduled cleaning".

Charging

Notice



Fully charge the robot before the first cleaning, at least 5 hours.
For successful charging, the robot must be in the switched on state.

The robotic vacuum cleaner is powered by a battery located in the body of the vacuum cleaner. Recharging is possible via the charging base or via the Homevac cleaning station. It must never be placed in a common area. Before first use, charge the robot vacuum cleaner battery to a full charge.

When cleaning is complete, the robot will automatically locate the charging base and start recharging. If the charging base is not within its range, it will stop the search after a while and report that it has not found the base.

For maximum battery life, follow the recommendations for regular use of the robot, even if there is a long interruption in use (e.g. going on holiday). We recommend that the charging base is kept active at all times, connected to the mains. The robot vacuum cleaner should be parked in the charging base in between the regular cleaning phases. Power consumption is minimal. The Homevac charging base/cleaning station ensures optimal battery care and the robot vacuum cleaner is always ready for use.

 
If you do not want to use the Homevac charging base/cleaning station continuously, the robot can be kept in a switched-off state between cycles. When you have finished cleaning, immediately recharge the robot to full battery capacity and then switch off using the main switch on the side of the robot body. This is the only way to store the robot for future use without risking damage to the battery.

Recharging the battery can take 4-6 hours, depending on the capacity depletion.

During use, the battery capacity gradually decreases and a new battery must be purchased after a while. This is a normal condition not a fault of the battery or the robot.

Charging base

Use the adapter to connect the charging base to the mains. Place the charging base against a wall and remove all objects 1 m to either side and 2 m in front of the base to avoid interfering with the auto-parking guidance beam. If the guidance beams are obstructed by objects placed around the base, the robot will not be able to locate the charging base and park properly. You can attach the charging base to the floor with double-sided tape.

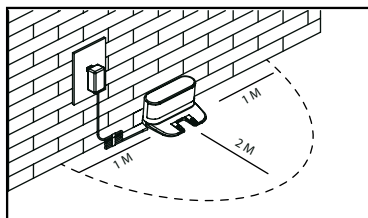


Use of charging base

After each cleaning, the robotic vacuum cleaner automatically locates the charging base, parks itself there and starts charging.

If the robot runs out of power during the cleaning process, it automatically drives to recharge and continues cleaning until it is finished.


Charging base indicator

 The light is on when the robot is off base. When the robot is in the base and charging, the light is off, so that the light does not disturb the comfort of your home. For information on charging status, please refer to the mobile app.

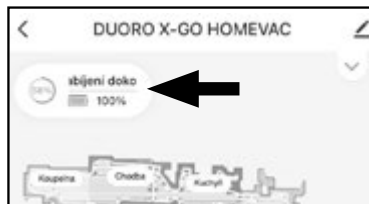


Self emptying station Homevac

 The Homevac cleaning station serves as a charging station and an extractor of dirt from the robot's waste container at the same time. Place the station according to the instructions. The station must be placed on a hard floor, not on carpet. We recommend leaving 1 meter of clear space around the station on the sides and 2 meters in front of the station for proper operation, so that the robot can park without any problems.

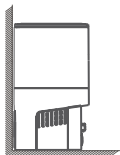

 
Place the station with its back to the wall. Make sure that there is enough space above the station for convenient opening of the lid and changing of dust bags.

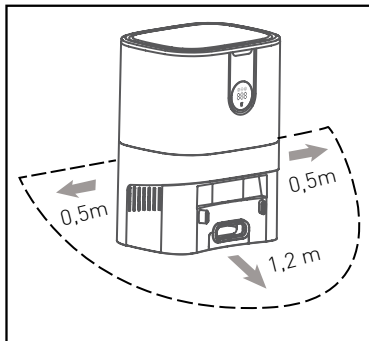

After each cleaning, the robot parks to suck out the dirt and then to recharge. You can set the frequency of vacuuming in the mobile app.

For extracting dirt, a special Homevac waste container must be installed in the robot. Other waste containers or the mopping module do not support this function.

 Before use, check that the dust bag is correctly installed under the station lid and remove the spare bag, which is located under the lid for transport only.

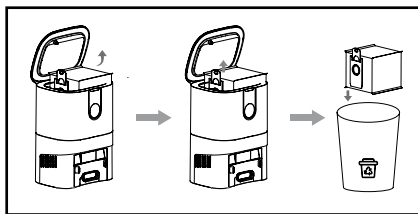


Notice



Never install the charging base together with the Homevac station in the same cleaning area. Never place the base or station near a staircase.

 Display

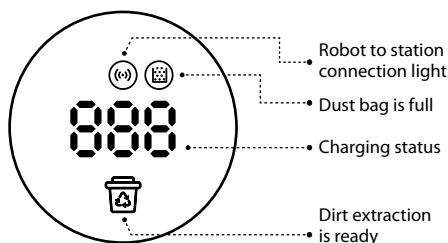

Frequency of station extraction

In the mobile app, you can set how often you want the station to extract dirt from the waste container. After one cleaning, after the 2nd to 4th cleaning. You can turn the suction off completely or suck out the dirt right away.

Other settings -> Station Homevac

Automatic charging

Prepare the Homevac cleaning station/charging base according to the previous instructions.

Enter the charging instructions in the mobile app, by remote control or by using the button on the display. The robot will park itself in the charging station/base and start charging the battery.

The robot vacuum cleaner should be permanently placed in the Homevac cleaning station/charging base. This ensures comprehensive care of the battery and the robot is ready for use at any time. Energy consumption during parking is minimal.

If the battery runs out during cleaning, the robot will locate the Homevac cleaning station/charging base, recharge and then automatically continue cleaning where it left off until it has finished.

If the charging base is not within its range, it will stop the unsuccessful search after a longer period of time and switch to sleep mode. Place the robot on the Homevac cleaning station/charging base manually.

Notice



 
 
When placing the robot in the Homevac cleaning station/charging base manually, make sure to position the charging touch pads precisely. When positioned correctly, the robot will announce "charging started".

Charging recommendations

- Keep the Homevac cleaning station/charging base plugged in at all times, if it is not plugged in the robot vacuum will not be able to find it and will not be able to charge automatically.
- Before charging, the robot must be switched on.
- If you will not be using the robot vacuum cleaner for an extended period of time (more than a week), fully charge the robot and turn off the main switch on the robot display.
- Do not use the robot vacuum cleaner while it is charging.
- If the robot vacuum cleaner runs out of power during cleaning, the robot will announce the low power status with a voice message and will search for a charging base to recharge.
- If the battery is completely drained without finding a charging base, charge the robot vacuum as soon as possible.

Battery status

The battery status is indicated by a number on the Homevac display or you can find the current status in the mobile app.

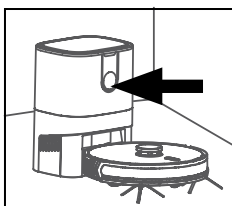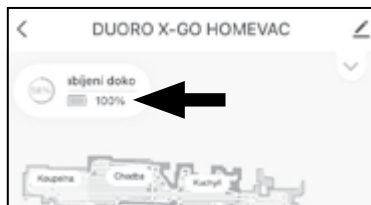


Tips to extend battery life

- Before first use, charge the robot vacuum cleaner battery to full charge, charge for at least 5 hours.
- If the battery is low, charge the robot vacuum cleaner immediately.
- If you will not be using the robot vacuum cleaner for an extended period of time (more than a week), charge the battery fully, turn off the robot vacuum cleaner with the main switch and store it in a cool, dry place.
- If you have not used the robot vacuum cleaner for more than three months, charge it directly using the mains adapter. If you do not use the robot vacuum cleaner for a longer period of time, recharge the battery every 3 months for at least 12 hours.
- Between cleaning cycles, leave the vacuum cleaner on the charging base, it takes care of the optimal battery condition and is ready for further use at any time.
- Never leave the robotic vacuum cleaner switched on in a discharged state! This can cause irreversible damage to the battery. Therefore, if the robot is discharged, allow it to recharge automatically via the charging base or recharge it immediately using the adapter.
- **When sending the robot for service, always make sure that it is in a switched-off state.**

Robot voice settings

 The default language of the robot is English. Setting the robot's voice to another language can be done conveniently in the mobile app or with the remote control.

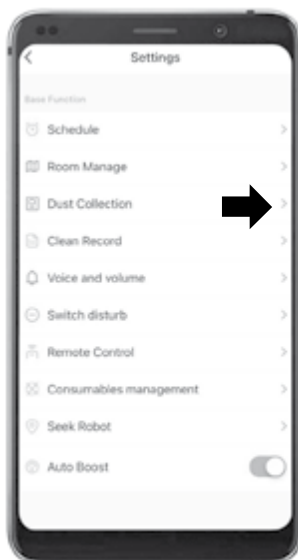

Sensors

Equipped with sensitive sensors and precise laser navigation, the robotic vacuum cleaner has perfect orientation in space and excellent visibility of obstacles.

• Anti-fall IR sensors

Thanks to them, the robot will never fall down the stairs.

Anti-collision sensors

Thanks to them, it can avoid obstacles on the floor.

It can also recognise obstacles that are dark or black in colour.

Notice

 


Due to the principle of the anti-fall IR sensor function, cleaning very dark, black or colour contrasting floors is not suitable for robotic vacuum cleaners. If there is a problem when cleaning such a floor, the robot backs up in front of the floor, avoids it, etc., the solution can be provided by expertly disconnecting the anti-fall sensors, which are located on the robot chassis. The adjustment can only be made if there is no staircase or elevated area in the home from which the robot could fall after disconnecting these sensors. Please contact our authorized service center to make the adjustment.

Regular maintenance

Side brush cleaning

- Check the side brushes regularly for damage, dirt or tangled hair. Coiled dirt can cause permanent damage to the brush motor.
- If the side brushes are curled or frayed, remove them and soak them in hot water for 5 seconds.
- If the side brushes are worn, replace them with new ones.
- Remove by pulling up, replace by pressing down. Please note the R (right) and L (left) side brush markings for correct fitting.

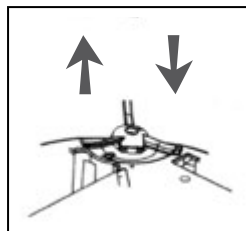



Cleaning the waste container and filters

Clean filters and an empty basket significantly increase the quality of cleaning.

- Clean the filters regularly and replace them after 4 months at the latest. The Hepa filter can be washed with water and left to dry freely if it becomes dirty.
- If you do not use the Homevac aself emptying station, empty the waste container after each cleaning or as soon as it is full.
- **NEVER USE THE ROBOTIC VACUUM CLEANER WITHOUT A WASTE CONTAINER AND HEPA FILTER.**

 
 
Combined mopping module

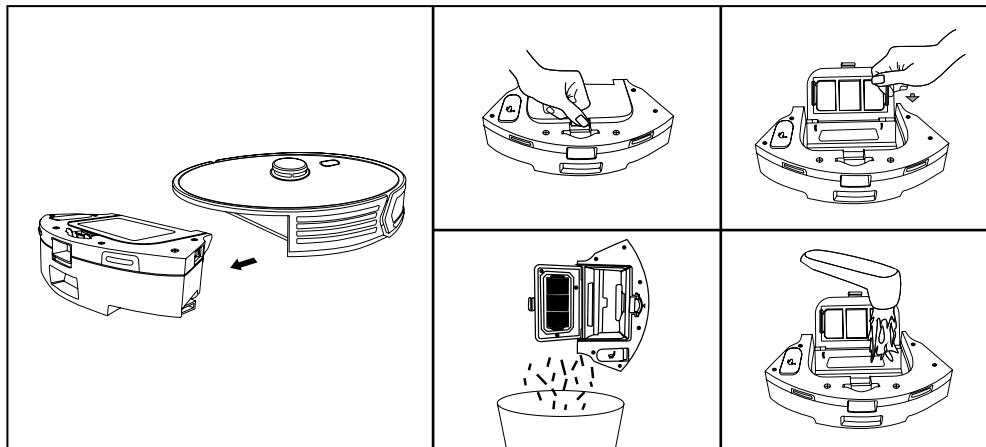

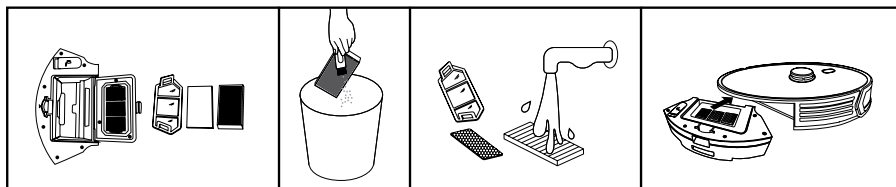

- A)** Press the latch to pull the waste container out of the robot.
- B)** Press the latch to open the container and empty the collected dirt. (The container can be washed with water.)
- C)** Pull out the filter and then the filter set (fine filter with grid + black secondary filter + Hepa filter). and clean them with a brush. You can wash the filters under running water, but never use detergent. Allow the filters to dry freely, ideally for 24 hours, before installing them back into the vacuum cleaner. Clean and dry the waste container thoroughly. Install the filters back into the waste container in the original order.

  Waste container Homevac

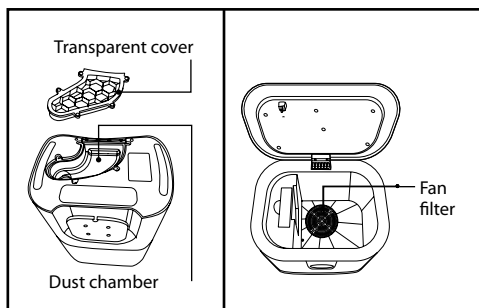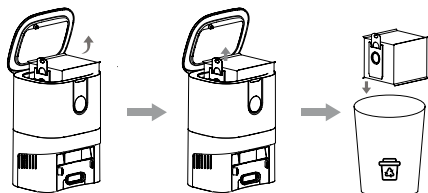

- A)** Open the station lid where the dust bag is located.
- B)** Use the plastic tab to pull out the bag and insert a new one.
- C)** Next to the dust bag you will find a cleaning brush with a blade for easy cleaning of tangled and settled hair and dust clumps. Check the dust chamber and fan filter for debris every month.

 
Notice



Never clean the cleaning station with water or a wet cloth, always wipe it dry with a duster. Never wash the robot vacuum cleaner with water or a wet cloth.


Cleaning wheels and sensors

Lightly wipe the wheels and sensors with a dry cloth or brush. Check the wheels regularly for hair and dirt. If necessary, remove the dirt immediately.

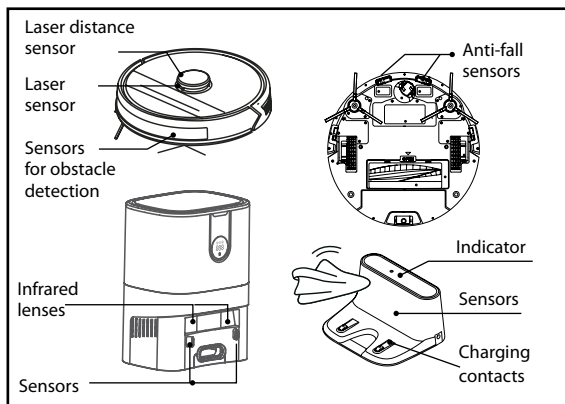

Cleaning contacts for charging

 Lightly wipe the charging contacts on both the robot vacuum cleaner and the charging base with a cloth or brush.

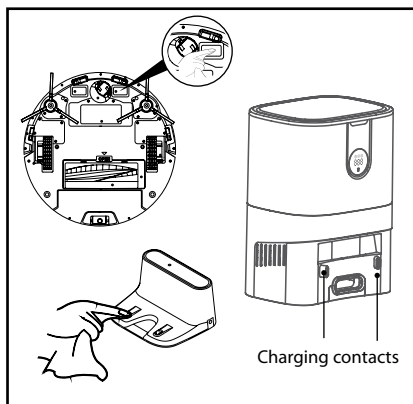

Cleaning the surface of the robot

The robotic vacuum cleaner can be wiped clean of dust with a dry or slightly damp cloth. Never wash the robot vacuum cleaner with water or a wet cloth. Liquid or moisture could penetrate the unit and cause permanent damage to the robot's electronics.

Suction head - opening

To release the suction head, press the grille lock towards the brush, at the "open" marking. The plastic is flexible, so don't be afraid to press harder in the direction of the arrow. Then lift the grille slightly upwards.

When inserting the head back into the vacuum cleaner, do the same in reverse order. Insert the safety latches first, then push in the lock area until the lock catch clicks lightly.

Suction head-cleaning

 
Remove the protective grille of the suction head. To release the grille, press from the safety locks.

Remove the brush part and clean both the brush and its cover with a cloth or a brush. Remove tangled hair and dust from the threads and axes of the brush. To remove tangled hair, you can use a bristle brush or scissors.

The brush can be washed with running water.

Install the brush back into the vacuum cleaner thoroughly dried.

When inserting the brush head back into the vacuum cleaner, proceed in the reverse order. First seat the rotary brush and then insert the grille safety latches, then push in the latch so that the latch lock engages with a light click.

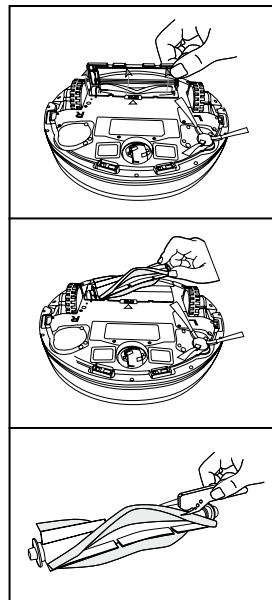


Be careful when turning the robot to avoid damage to the laser lidar.

Mop care

The mops can be washed in an automatic washing machine, delicate programme with water temperature max 30°C. After washing, we recommend to flatten the mop and let it dry on a flat surface. Rinse or wash the mop after each cleaning and leave to dry.

Insert and replace the battery

 - Switch off the robot using the main button on the display.
- Unscrew the two screws on the battery cover.
- Remove the battery cover.
- Remove the battery.
- Disconnect the connectors that connect the battery to the body of the robot.
- Insert the new battery.
- Connect the connectors.
- Put the battery cover back in place and make sure the side brush is not pinched.
- Screw in the two screws on the battery cover.

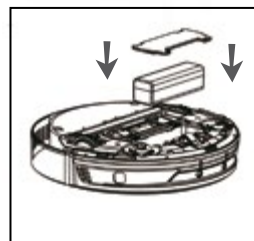

CAUTION: Use only batteries approved by the manufacturer and dealer of the robot vacuum cleaner.

Correct battery disposal

Before throwing away or recycling the robot vacuum cleaner, remove the battery. Turn off the main switch on the side of the robot before removing the battery. Dispose of the used battery at the designated locations. Never dispose of a used battery in the trash or regular garbage!

www.robzone.com

info@robzone.com

**Distributor:
RobZoneEurope s.r.o.
Průmyslová 11472/11
102 00 Praha 10
Czech Republic**

Made in China



Li - Ion

